



CONNECTION OF ACTIVATION UNITS TO MCU/MCU-ER

CONNECTION OF PRESENCE ACTIVATION UNITS TO MCU/MCU-ER

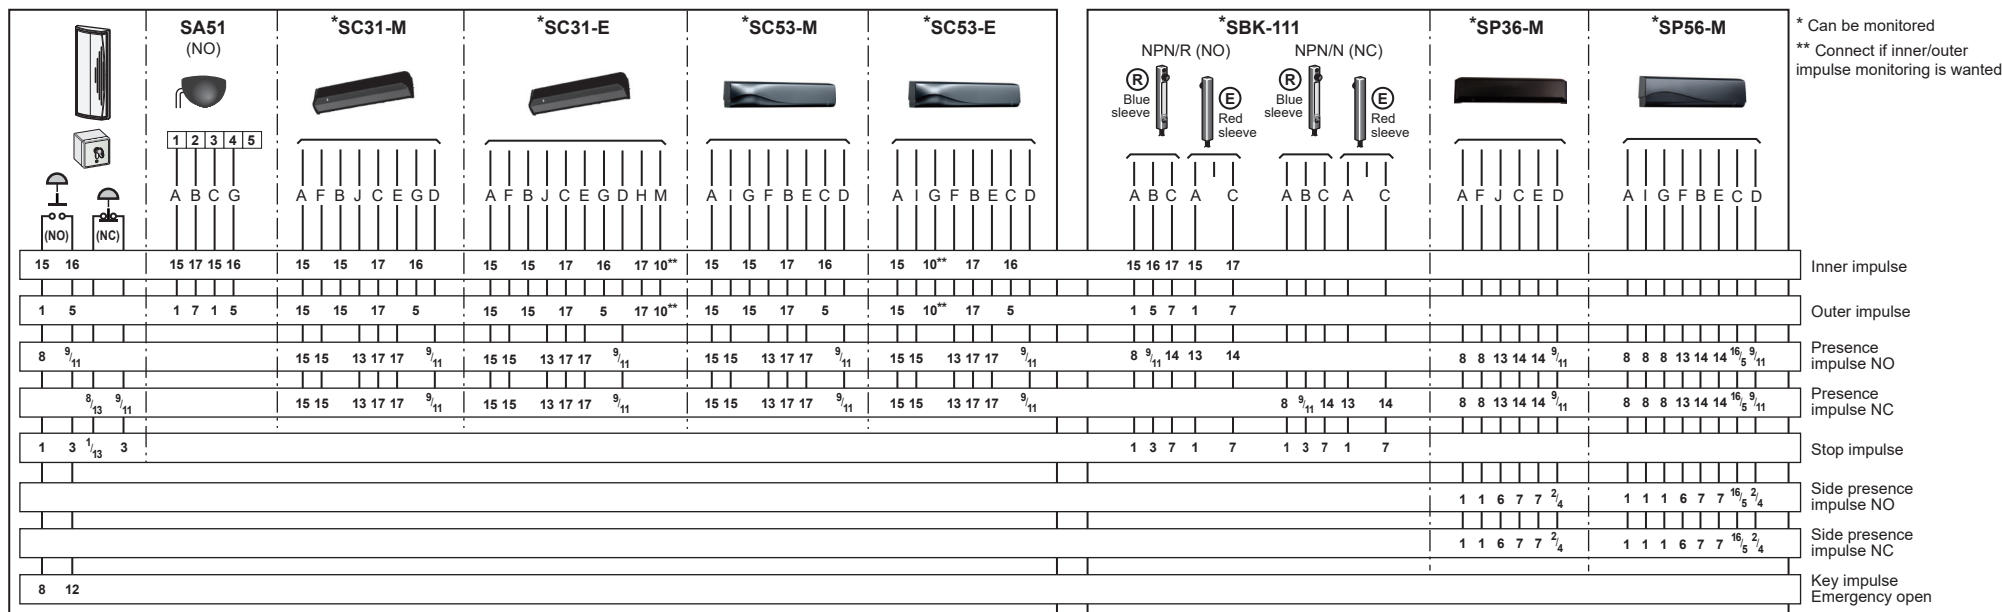

* Can be monitored
** Connect if inner/outer impulse monitoring is wanted

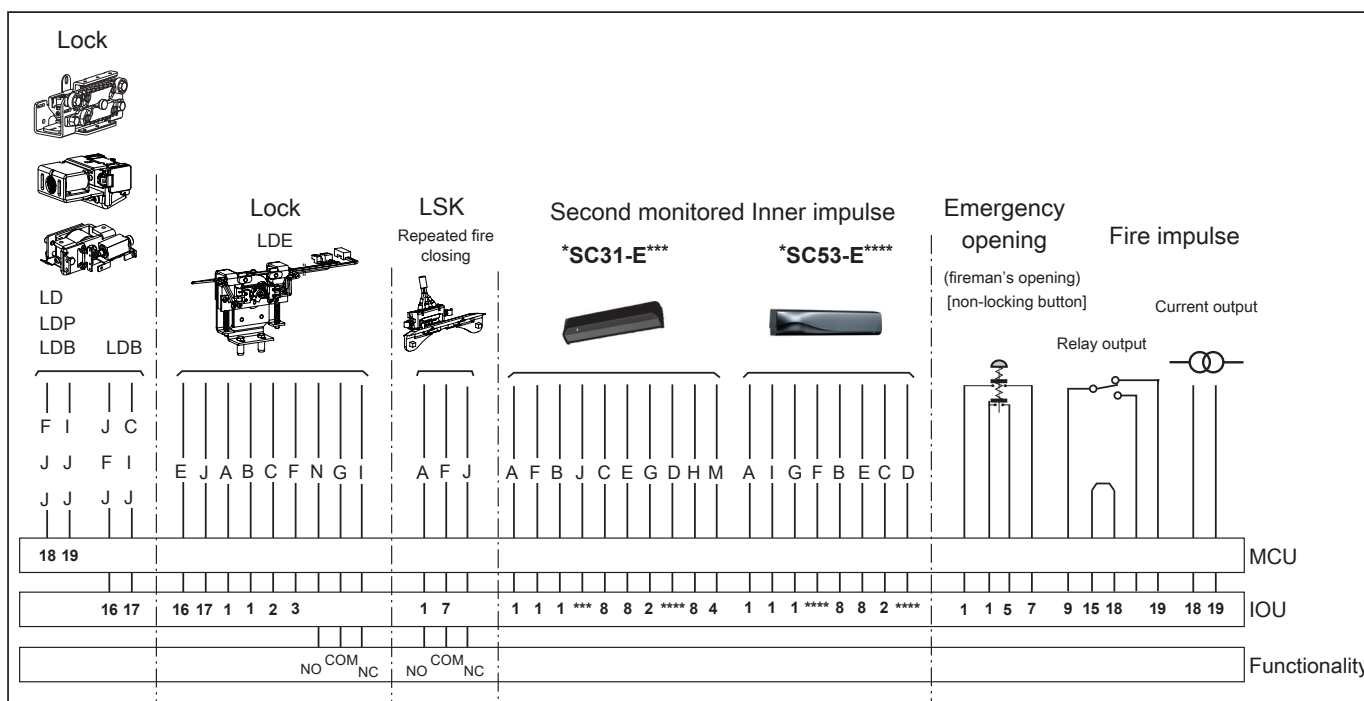

A= Brown H= Grey/Pink
B= Green I= Grey
C= White J= Black
D= Pink M= Red/Blue
E= Red N= Purple
F= Blue O= Orange
G= Yellow

*** SC31-E Presence impulse shall be configured to NC.
Connect from sensor 1 Pink to sensor 2 Black.
Connect from sensor 1 Black to MCU-13.
Connect from sensor 2 Pink to MCU-9.

**** SC53-E Presence impulse shall be configured to NC.
Connect from sensor 1 Pink to sensor 2 Blue.
Connect from sensor 1 Blue to MCU-13.
Connect from sensor 2 Pink to MCU-9.