


Corridor mounted, PUSH

Note! Door closer size 4.





DIN Right

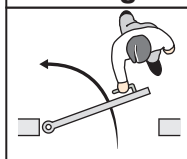

Accessories needed:

Arm system PUSH-335 (1007965BK/SI)

Telescopic part (173005BK/SI)

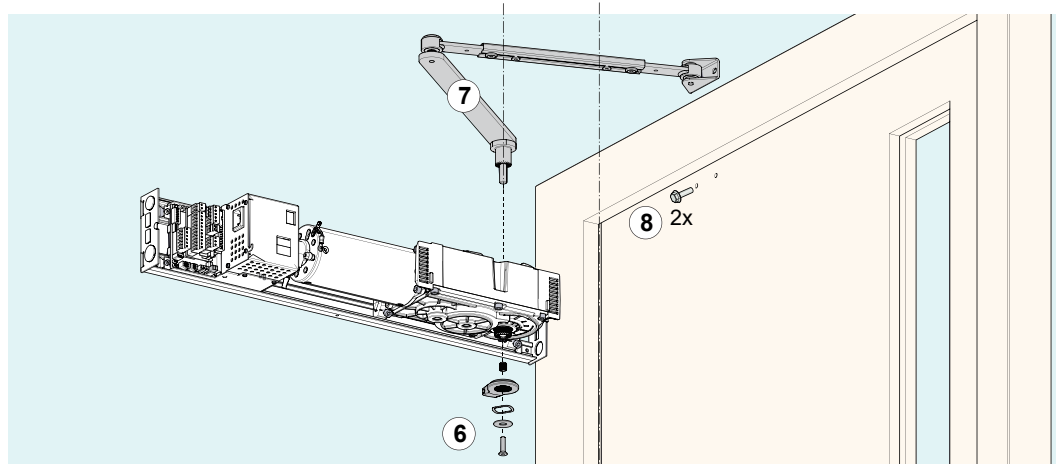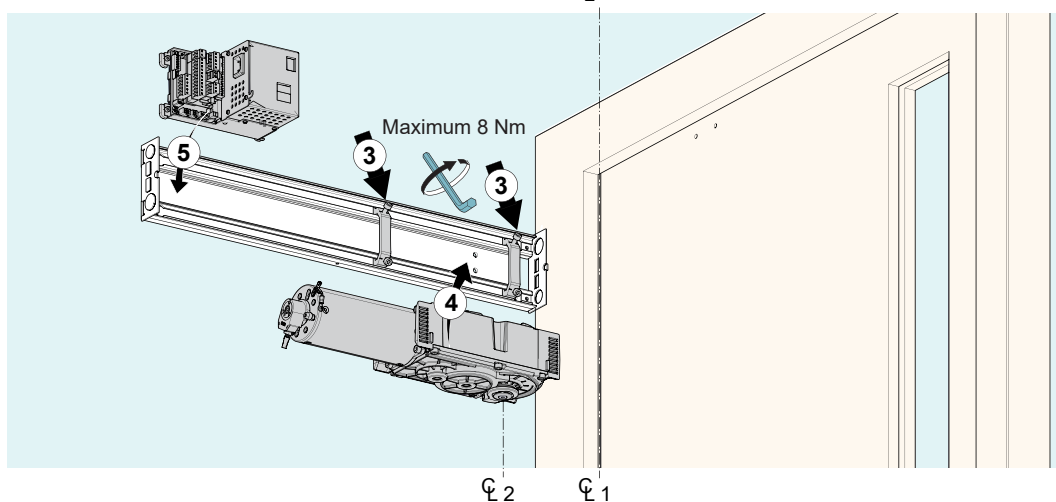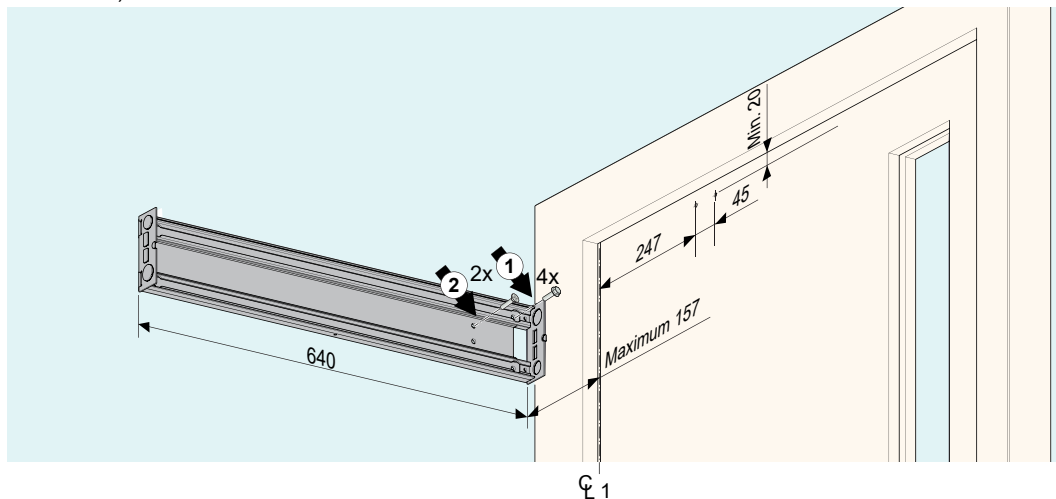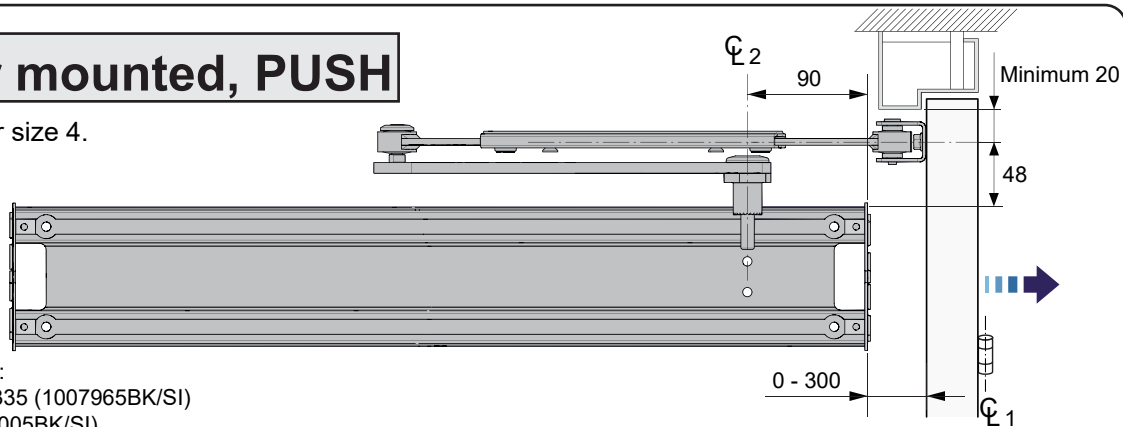

1 (12)

Quick Start

ASSA ABLOY SW200 shorty




ASSA ABLOY


1.0

1025594-en


View from bottom up

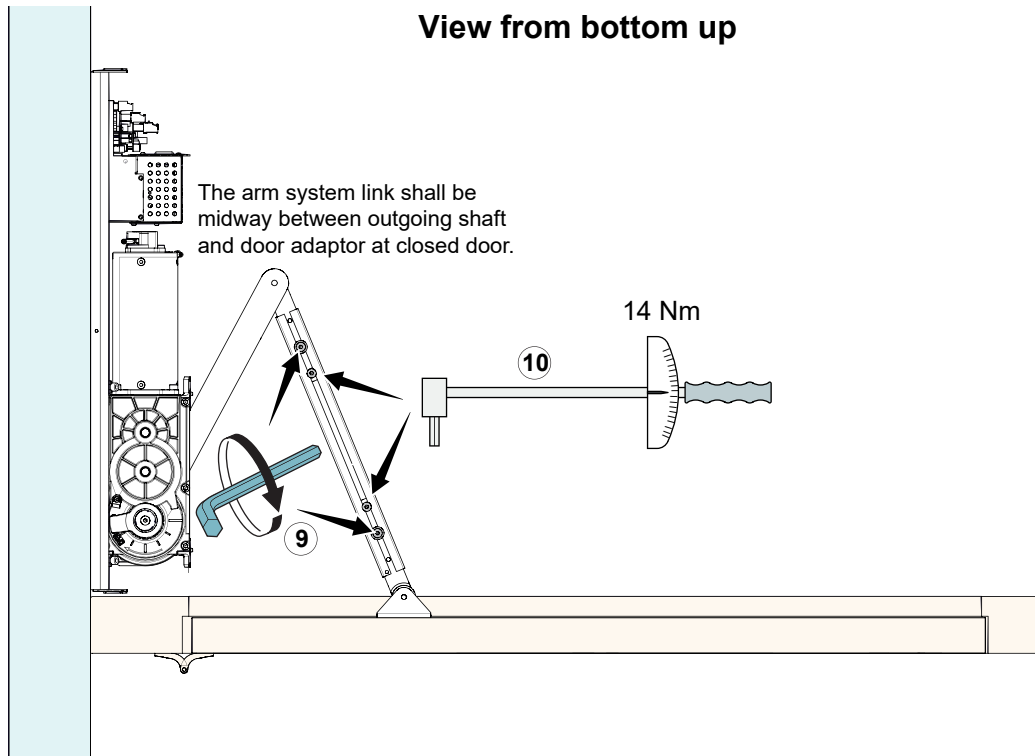

View from above

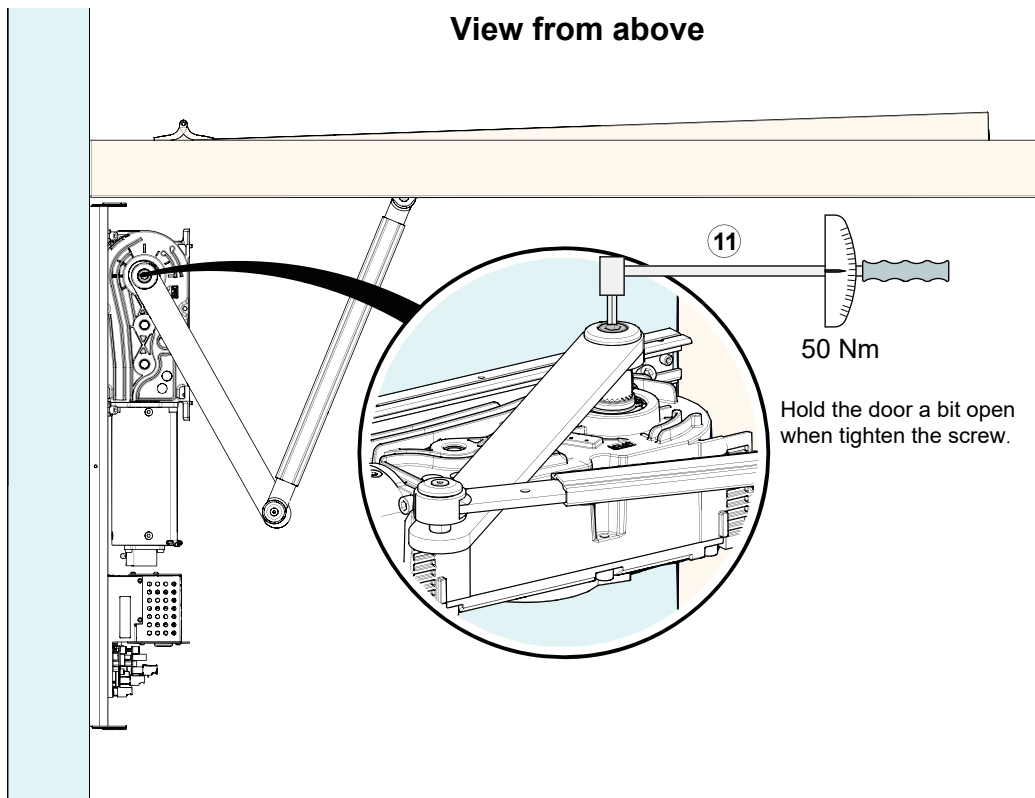

Set DIP switch, type of arm system: Concealed (without panic switch).



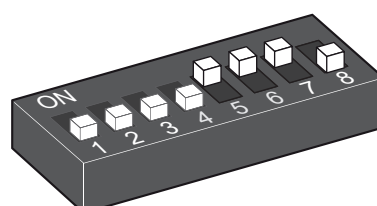


Corridor mounted, PULL


Note! Door closer size 4.

Accessories needed:
Arm system PULL-600 (1014729BK/SI)

DIN Right

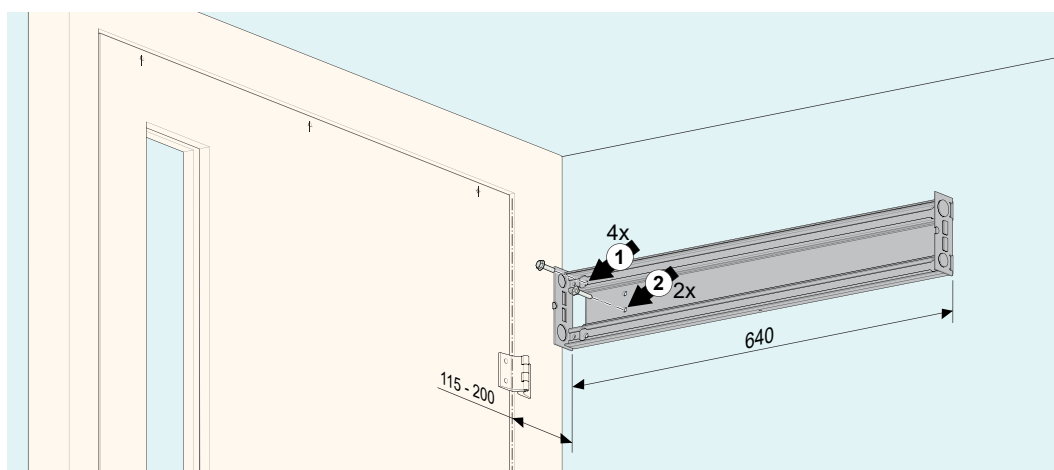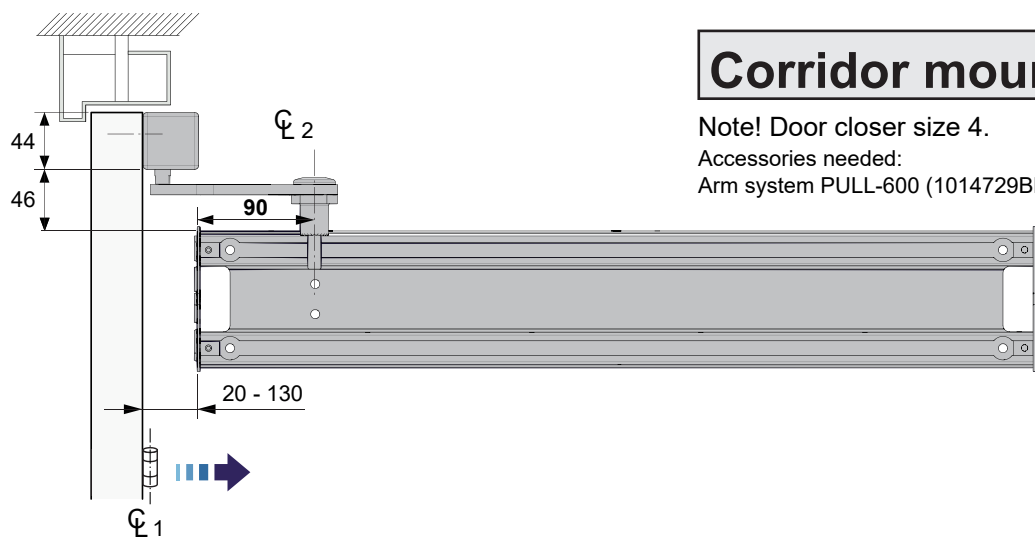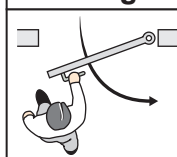



C1

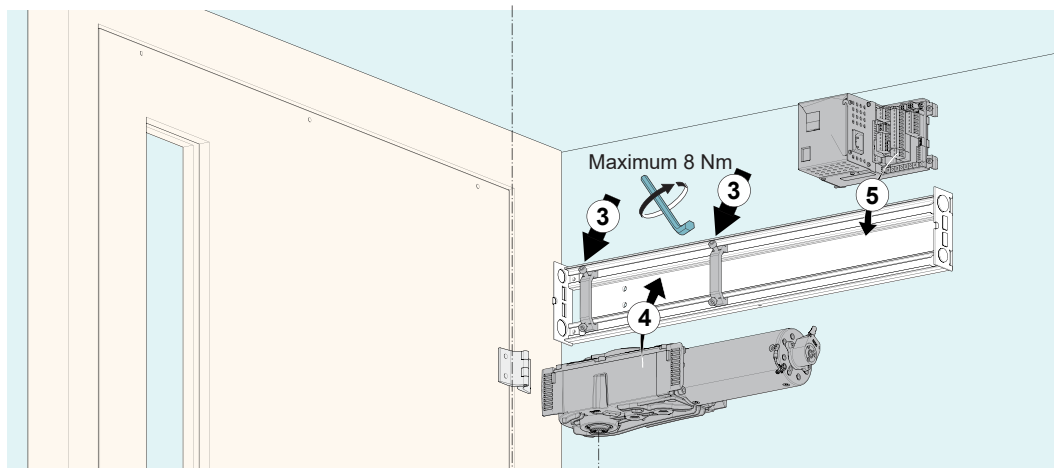


C1


C2

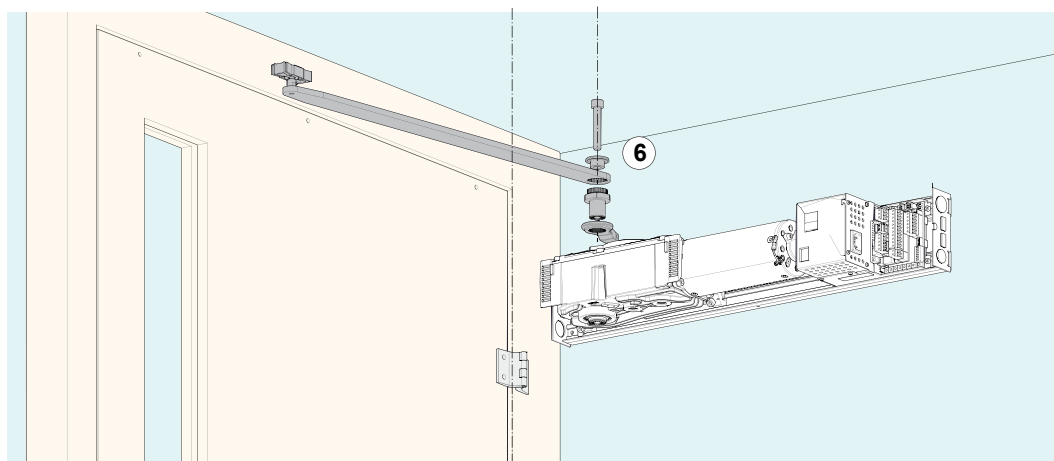

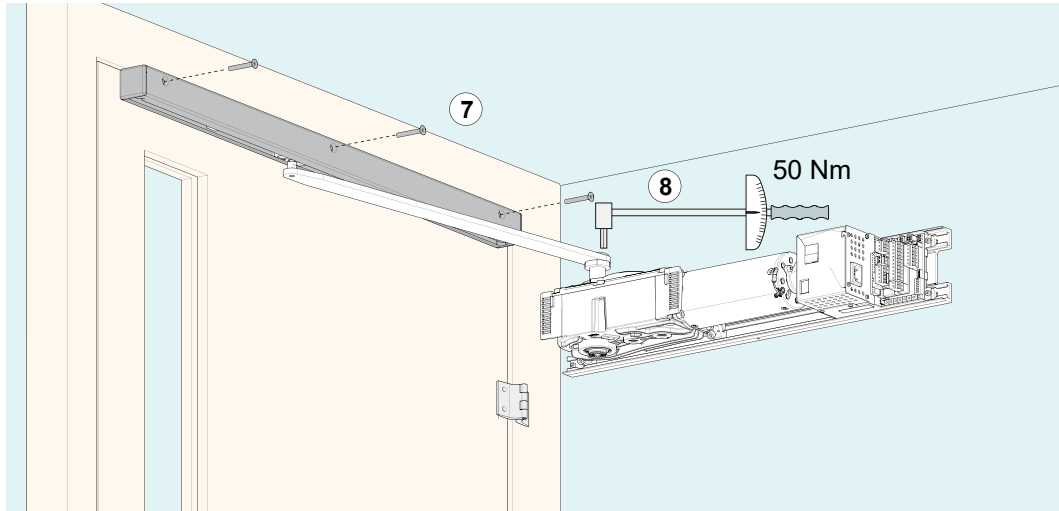

Set DIP switch, type of arm system: Concealed (without panic switch).

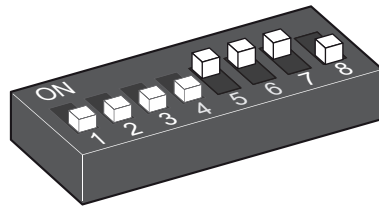


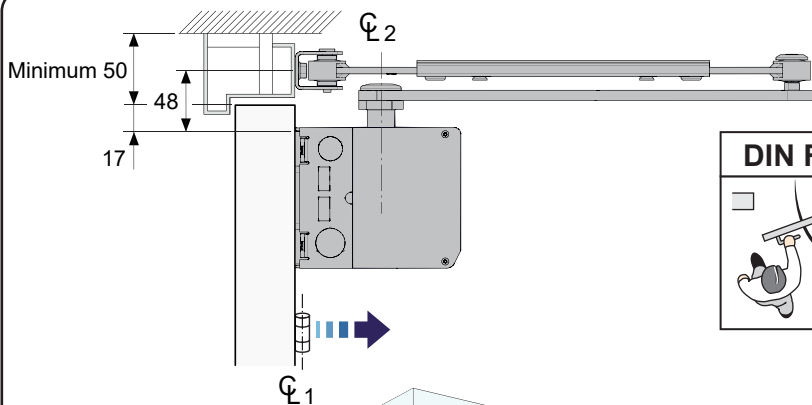

Door mounted, PUSH

Note! Door closer size 7.

DIN Right

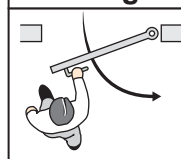

Accessories needed:

Arm system PUSH-335 (1007965BK/SI)




Telescopic part (173005BK/SI)

Door mounting kit 100132

Choose B value depending of wall depth Z.

B	X	Z
210*	60	70
245	70	105
280	80	140
315	90	175
350	100	210
385	110	245


*If door opening angle is $< 86^\circ$, use arm system 1007241BK/SI.

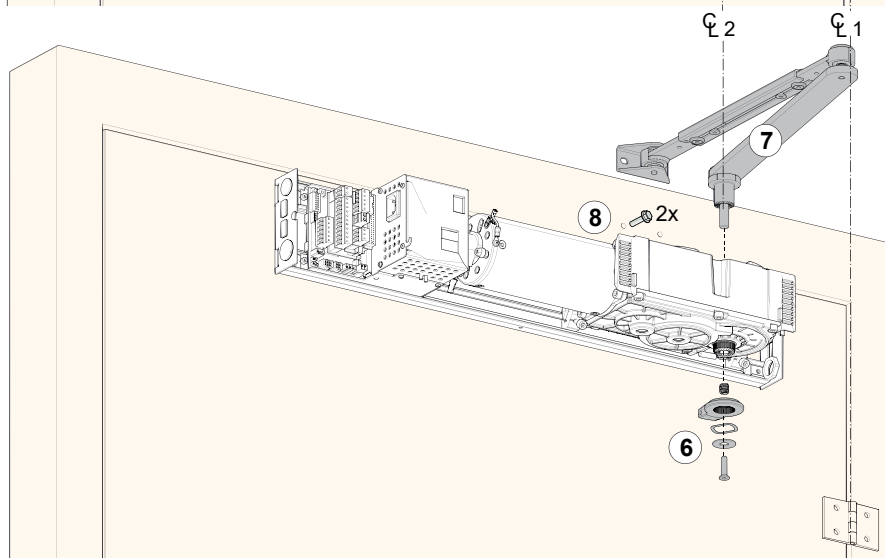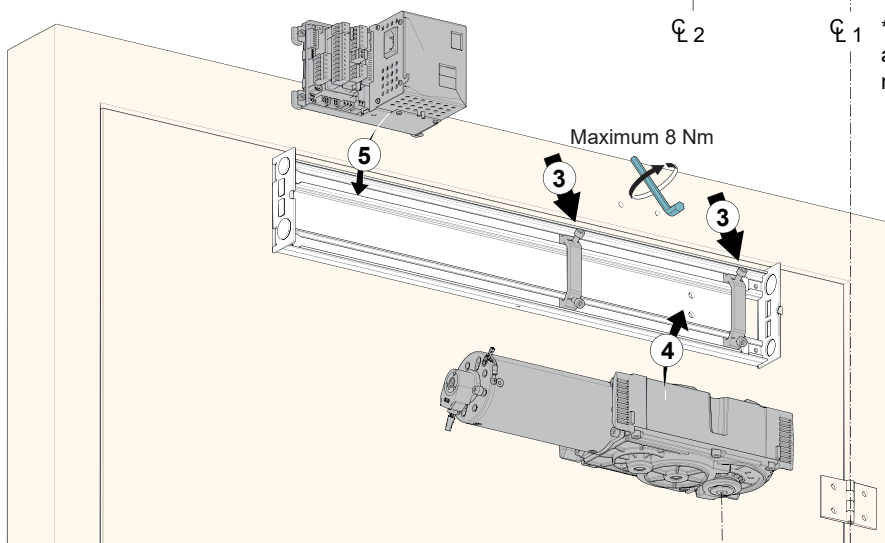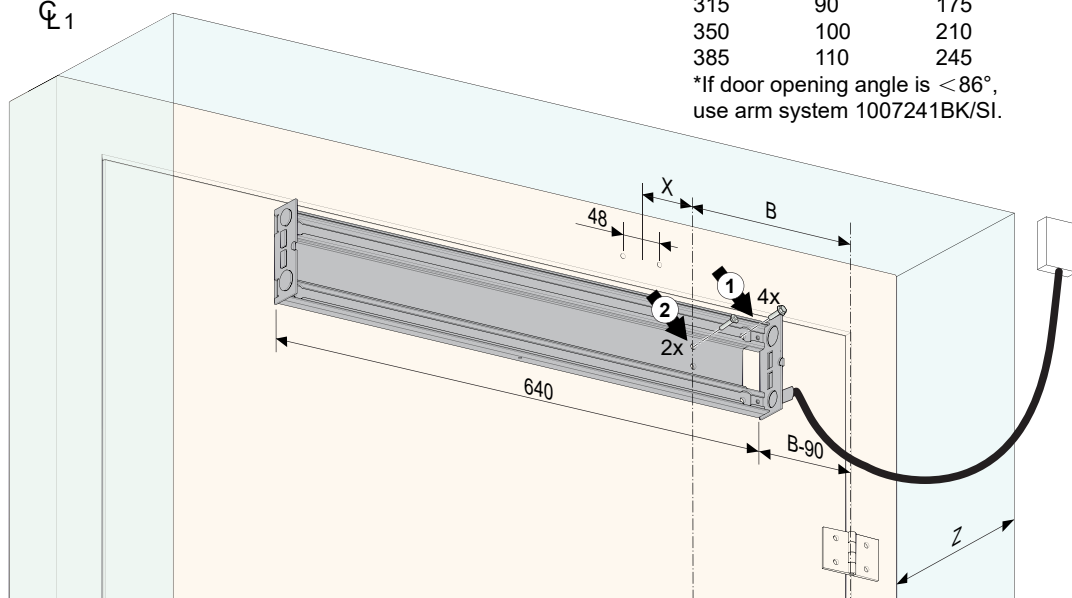


*Make sure that cover and flexible cable will not hit the wall.



Overview

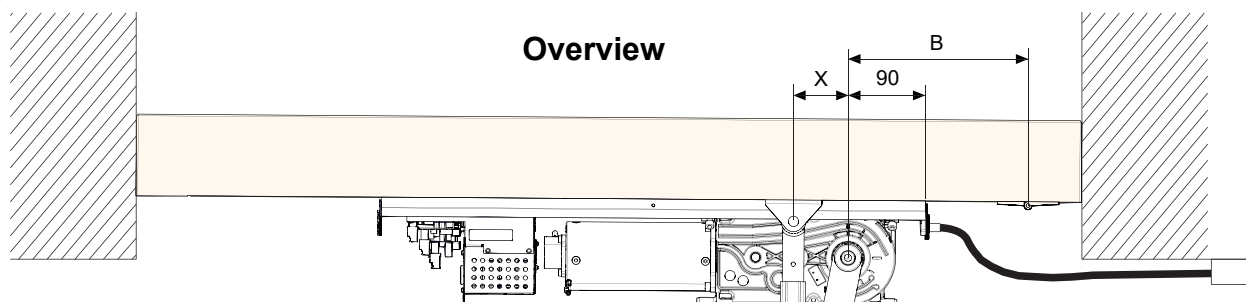


View from bottom up

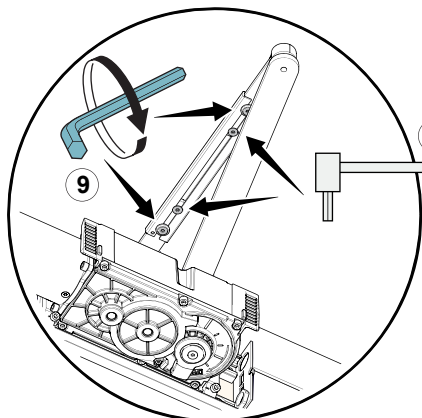

14 Nm

10


View from above

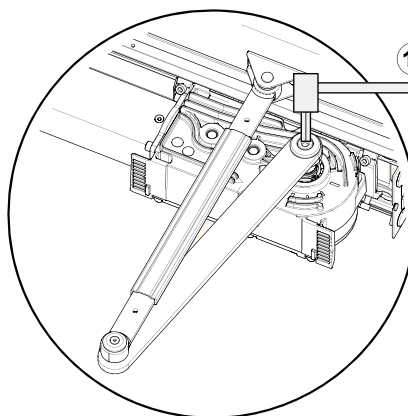


50 Nm

11


Hold the door a bit open when tighten the screw.

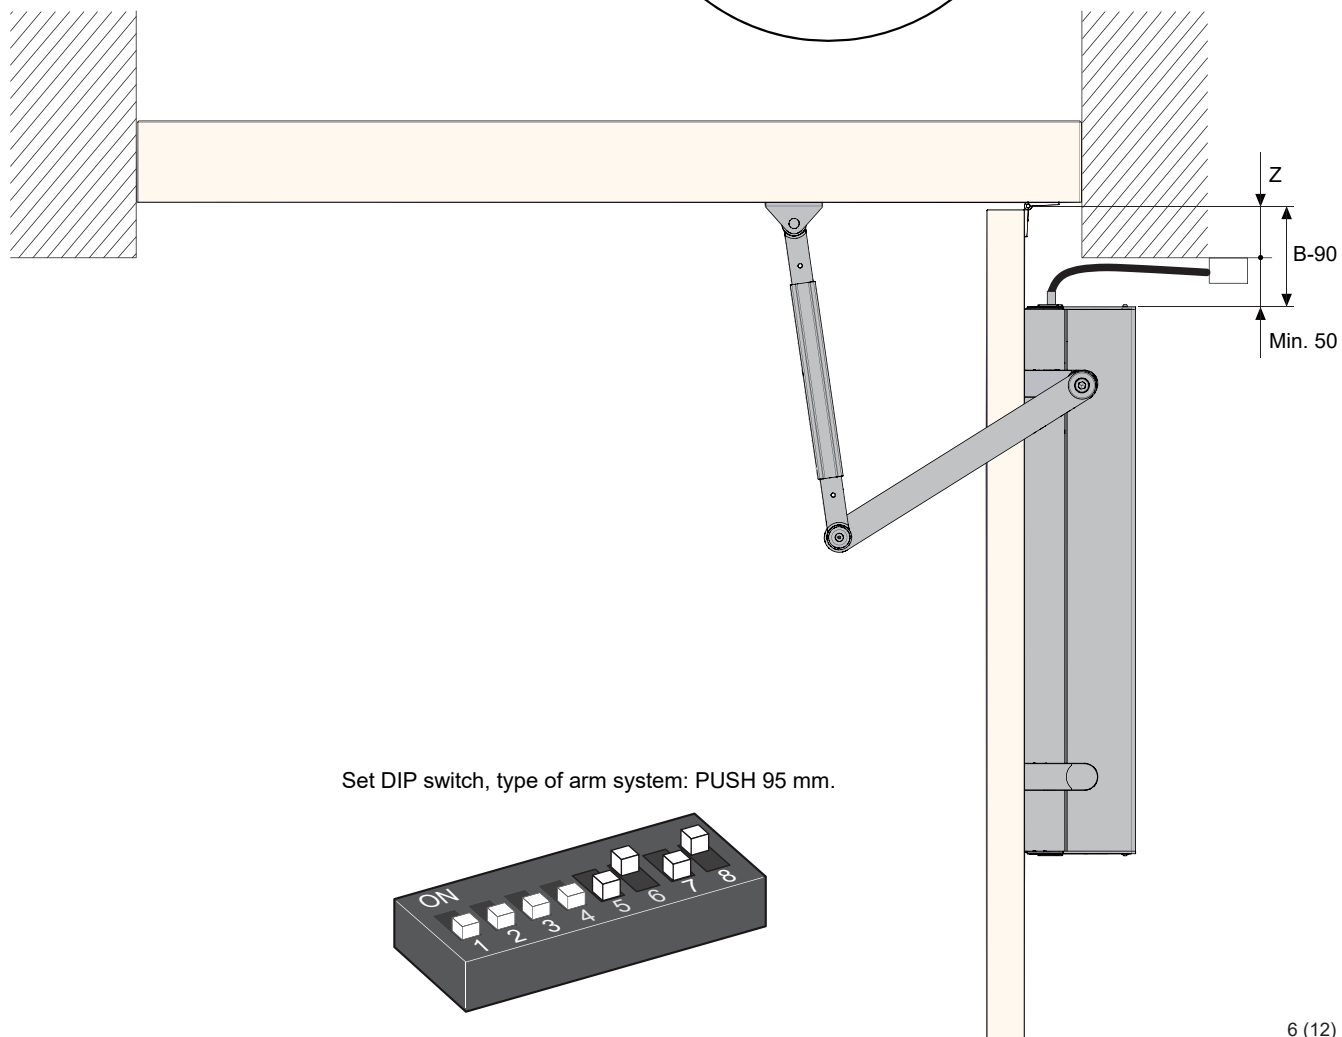

Set DIP switch, type of arm system: PUSH 95 mm.

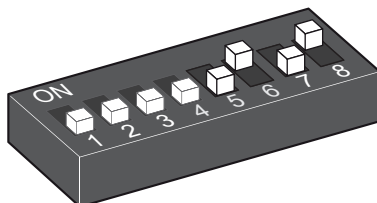

Door mounted, Sliding PUSH

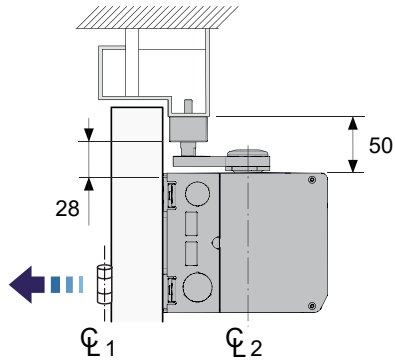

Note! Door closer size 4.

Accessories needed:





Door mounting kit 100132



Arm system PULL-400 (1008401BK/SI)

Lower adaptor 1010296BK/SI


Note! The slide track to be installed onto the frame.

DIN Right

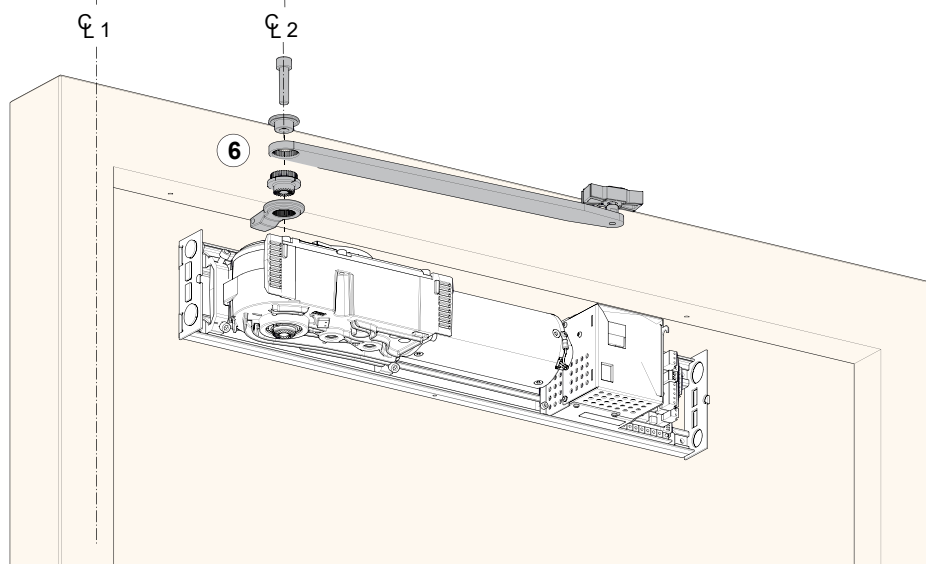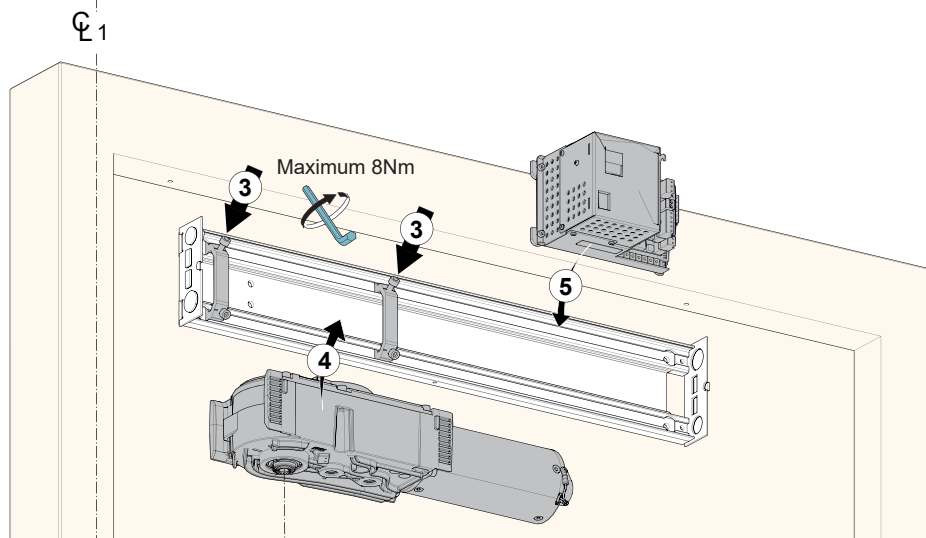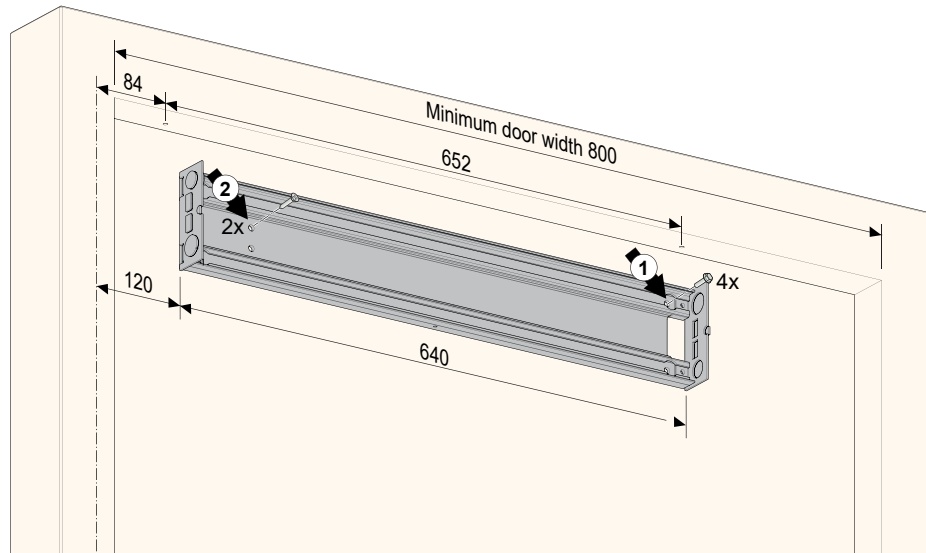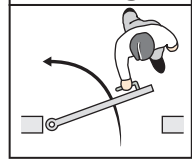


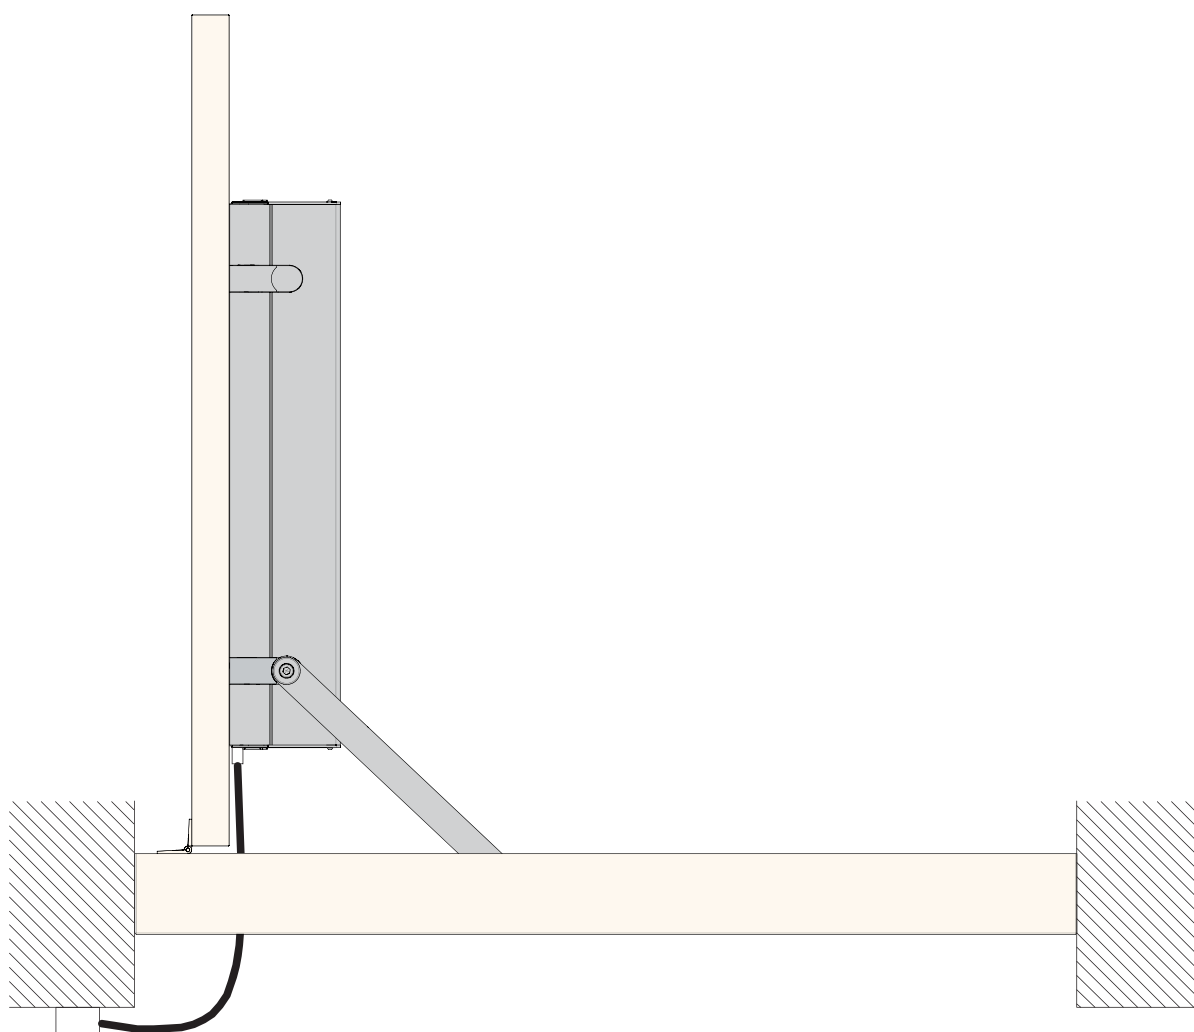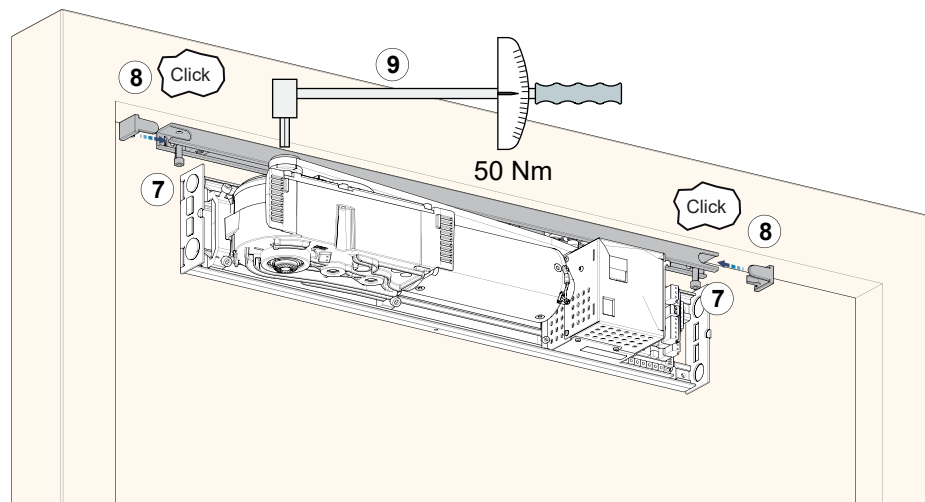

Set DIP switch, type of arm system: PULL 95 mm.

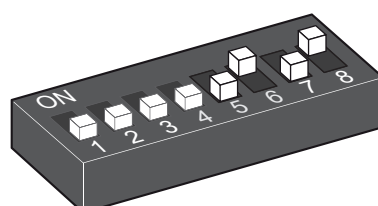


Side mounted, PUSH



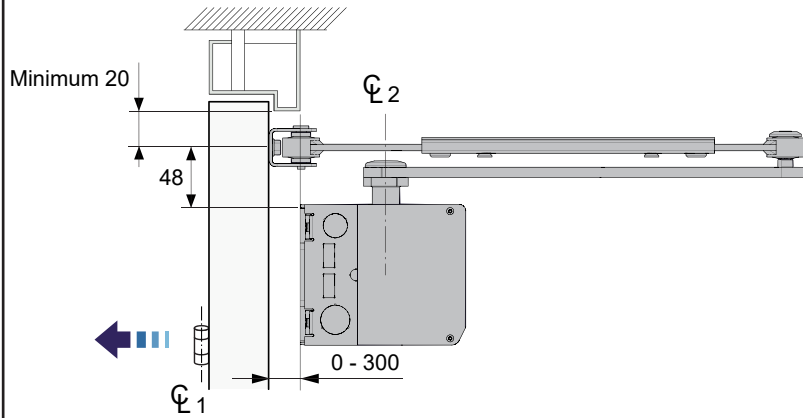


Note! Door closer size 4.

DIN Right

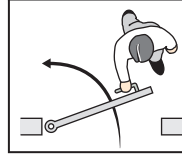


Accessories needed:
Arm system PUSH-335 (1007965BK/SI)
Telescopic part (173005BK/SI)

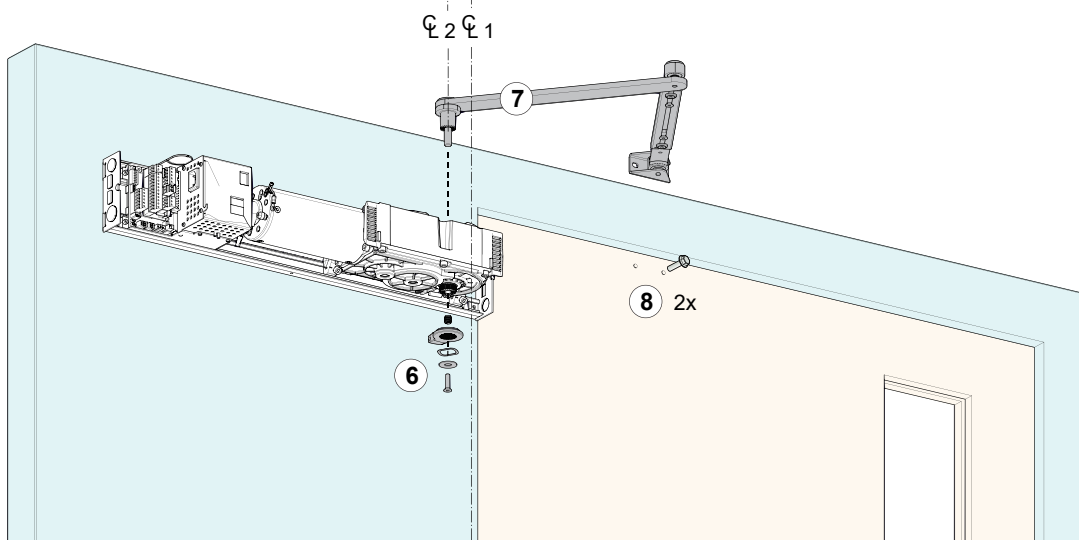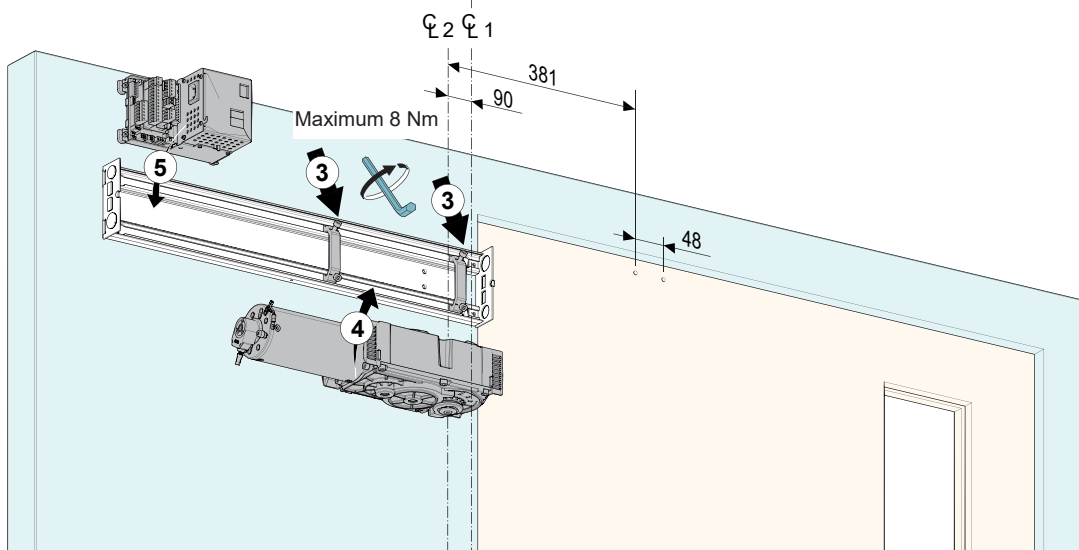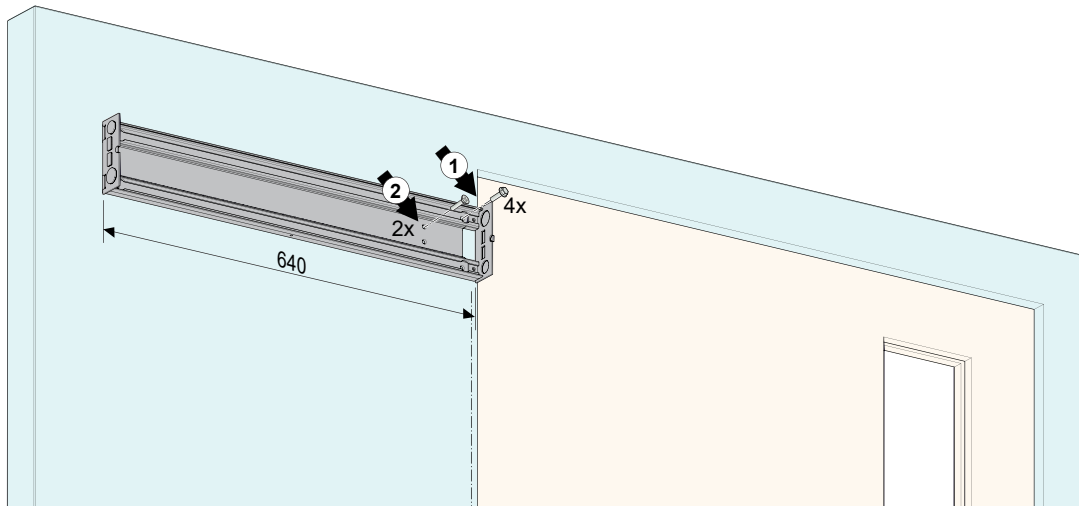


View from bottom up


The arm system link shall be midway between outgoing shaft and door adaptor at closed door.

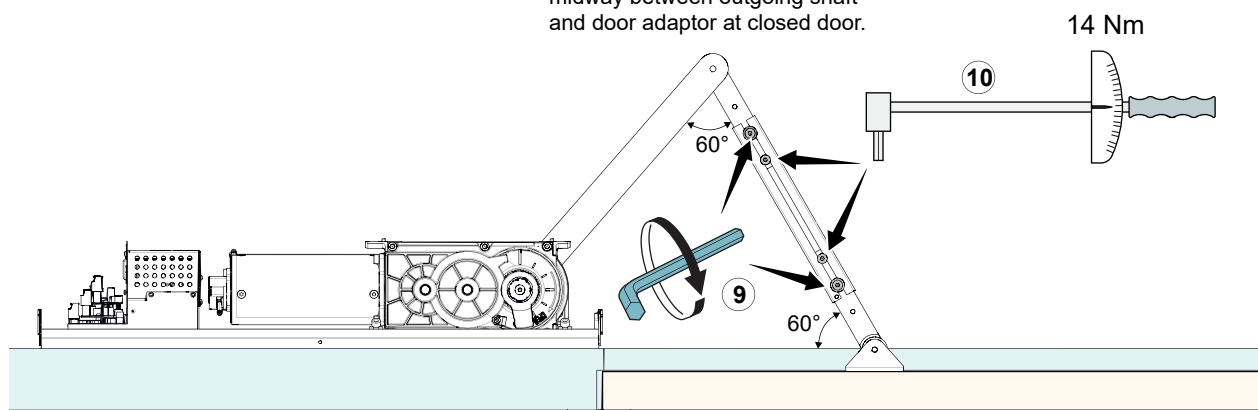


View from above

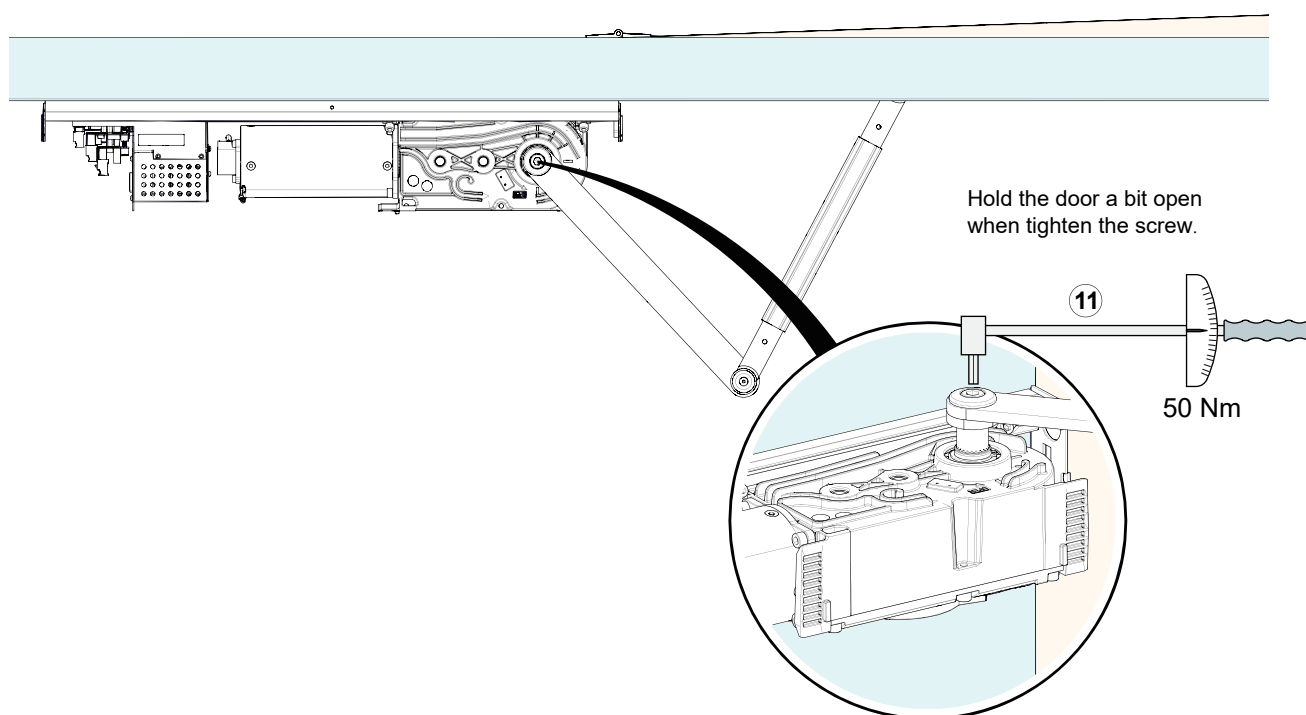

Set DIP switch, type of arm system: Concealed (without panic switch).

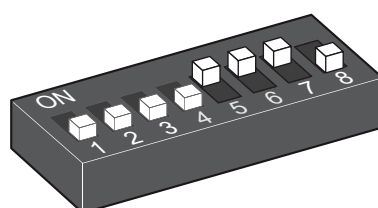


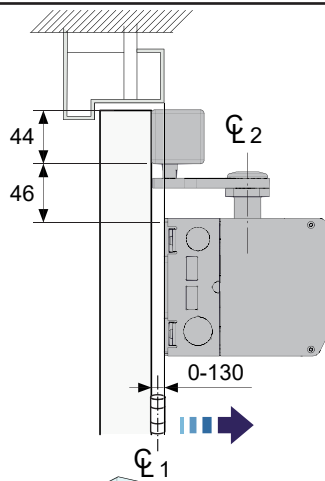




Side mounted, PULL


Note! Door closer size 3.

DIN Right

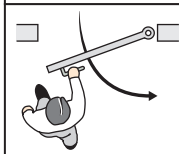

Accessories needed:
Arm system PULL-600 (1014729BK/SI)

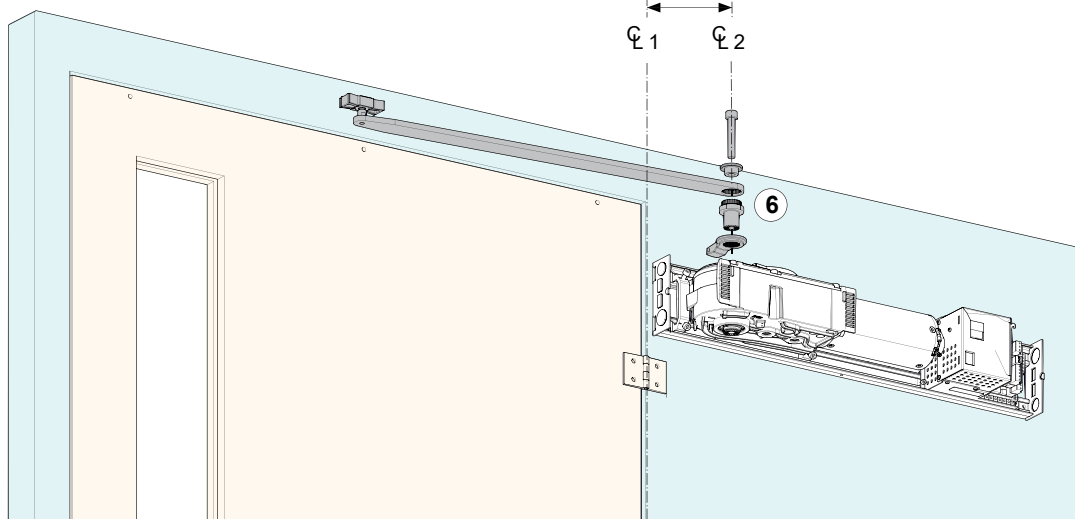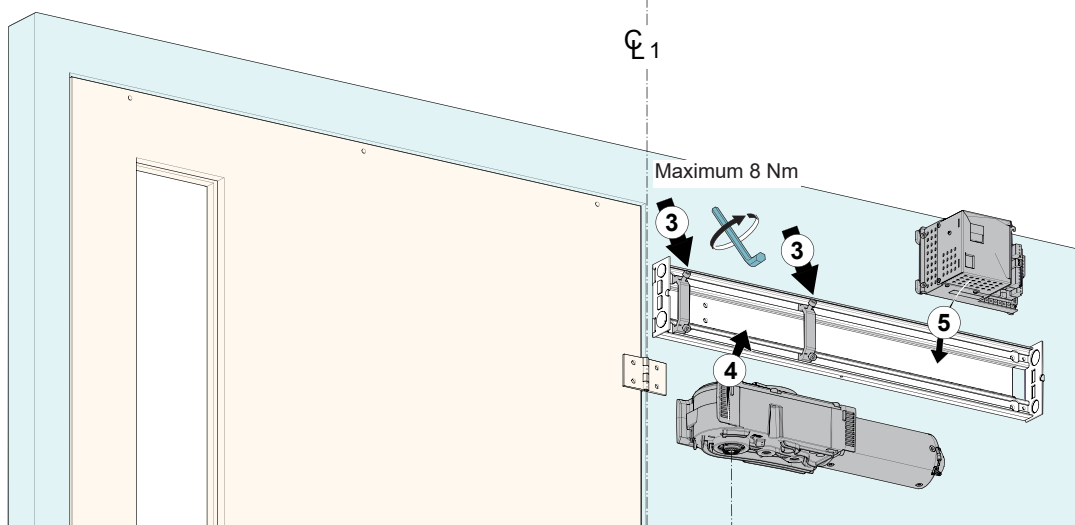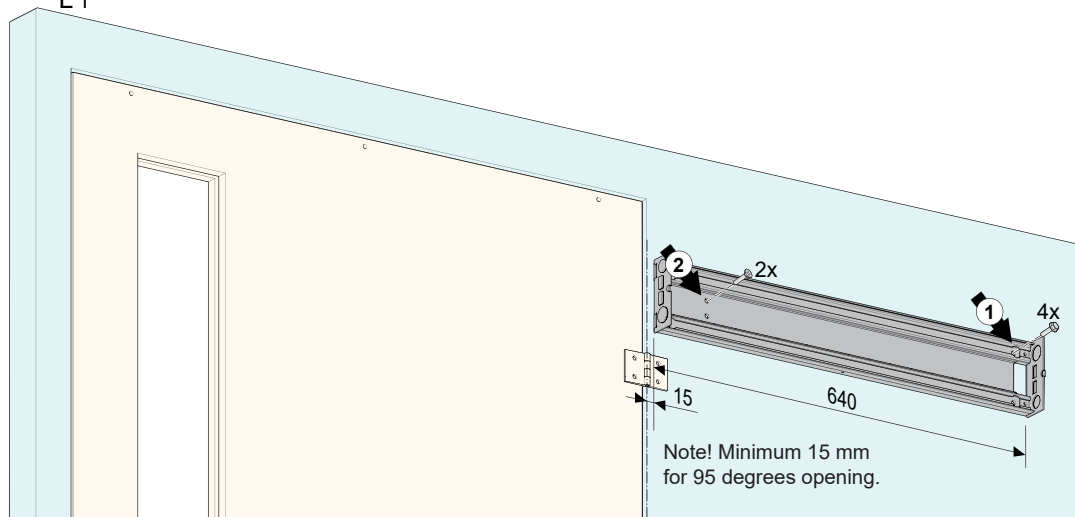

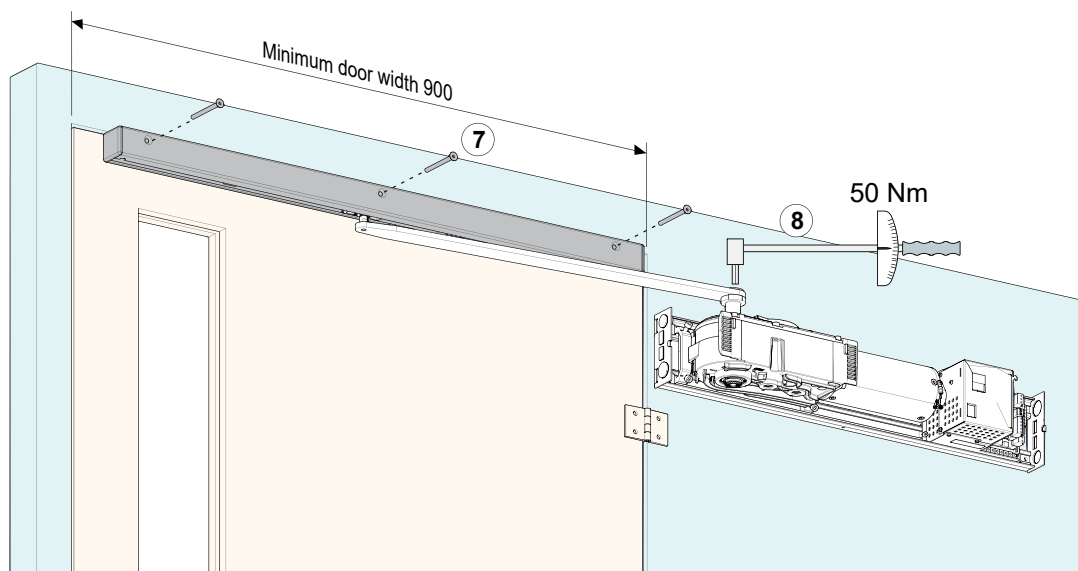

Set DIP switch, type of arm system: Concealed (without panic switch).

